

Conexão Metálica

Características Técnicas	
Fluído	Ar, Água
Material do corpo	Latão niquelado
Pressão de trabalho (Bar)	0 ~ 10
Temp. de trabalho (°C)	-20 ~ 180



Niple Longo	
Código	Rosca
N-M5	M5
N-01	1/8"
N-02	1/4"
N-03	3/8"
N-04	1/2"
N-06	3/4"
N-10	1"



Niple Longo de Redução		
Código	Rosca 1	Rosca 2
N-M5-01	M5	1/8"
N-01-02	1/8"	1/4"
N-01-03	1/8"	3/8"
N-02-03	1/4"	3/8"
N-01-04	1/8"	1/2"
N-02-04	1/4"	1/2"
N-03-04	3/8"	1/2"
N-02-06	1/4"	3/4"
N-03-06	3/8"	3/4"
N-04-06	1/2"	3/4"
N-03-10	3/8"	1"
N-04-10	1/2"	1"
N-06-10	3/4"	1"



Luva Sextavada	
Código	Rosca
LS-01	1/8"
LS-02	1/4"
LS-03	3/8"
LS-04	1/2"
LS-06	3/4"
LS-10	1"

Rosca 1



Rosca 2

Buchas de Redução Macho - Fêmea		
Código	Rosca 1	Rosca 2
BR-M5-01	M5	1/8"
BR-01-02	1/8"	1/4"
BR-01-03	1/8"	3/8"
BR-02-03	1/4"	3/8"
BR-02-04	1/8"	1/2"
BR-02-04	1/4"	1/2"
BR-03-04	3/8"	1/2"
BR-02-06	1/4"	3/4"
BR-03-06	3/8"	3/4"
BR-04-06	1/2"	3/4"
BR-04-10	1/2"	1"
BR-06-10	3/4"	1"

Rosca 2



Rosca 1

Luva Sextavada de Redução		
Código	Rosca 1	Rosca 2
LR-M5-01	M5	1/8"
LR-01-02	1/8"	1/4"
LR-01-03	1/8"	3/8"
LR-02-03	1/4"	3/8"
LR-01-04	1/8"	1/2"
LR-02-04	1/4"	1/2"
LR-03-04	3/8"	1/2"
LR-02-06	1/4"	3/4"
LR-03-06	3/8"	3/4"
LR-03-10	3/8"	1"
LR-04-10	1/2"	1"
LR-06-10	3/4"	1"

Rosca 2



Rosca 1


Adaptador Macho - Fêmea		
Código	Rosca 1	Rosca 2
A-M5-01	M5	1/8"
A-01-02	1/8"	1/4"
A-01-03	1/8"	3/8"
A-02-03	1/4"	3/8"
A-01-04	1/8"	1/2"
A-02-04	1/4"	1/2"
A-03-04	3/8"	1/2"
A-02-06	1/4"	3/4"
A-03-06	3/8"	3/4"
A-04-06	1/2"	3/4"
A-03-04	3/8"	1/2"
A-03-10	3/8"	1"
A-04-10	1/2"	1"
A-06-10	3/4"	1"



Bloco Distribuidor		
Código	Rosca	Saídas
D4-01	1/8"	4
D4-02	1/4"	4
D4-03	3/8"	4
D4-04	1/2"	4



Bloco Distribuidor		
Código	Rosca	Saídas
D5-01	1/8"	5
D5-02	1/4"	5
D10-01	1/8"	10
D10-02	1/4"	10

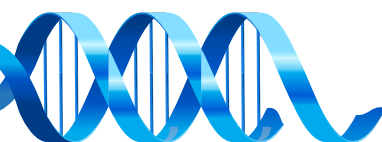



GHPC[®]

Tecnologia em Produtos Pneumáticos

Regulador de Pressão - Série R



Conexão Cruzeta	
Código	Rosca
X-01	1/8"
X-02	1/4"
X-03	3/8"
X-04	1/2"
X-06	3/4"
X-10	1"



Conexão Cotovelo Fêmea	
Código	Rosca
LF-01	1/8"
LF-02	1/4"
LF-03	3/8"
LF-04	1/2"
LF-06	3/4"
LF-10	1"



Conexão Cotovelo Macho	
Código	Rosca
L-01	1/8"
L-02	1/4"
L-03	3/8"
L-04	1/2"
L-06	3/4"
L-10	1"



Conexão Cotovelo Macho - Fêmea	
Código	Rosca
LFM-01	1/8"
LFM-02	1/4"
LFM-03	3/8"
LFM-04	1/2"
LFM-06	3/4"
LFM-10	1"



Conexão "Y" Fêmea	
Código	Rosca
YF-01	1/8"
YF-02	1/4"
YF-03	3/8"
YF-04	1/2"



Conexão "T" Fêmea	
Código	Rosca
TF-01	1/8"
TF-02	1/4"
TF-03	3/8"
TF-04	1/2"
TF-06	3/4"
TF-10	1"



Conexão "T" Macho	
Código	Rosca
T-01	1/8"
T-02	1/4"
T-03	3/8"
T-04	1/2"
T-06	3/4"
T-10	1"



Conexão "T" Macho Lateral	
Código	Rosca
TLM-01	1/8"
TLM-02	1/4"
TLM-03	3/8"
TLM-04	1/2"
TLM-06	3/4"
TLM-10	1"



Conexão "T" Fêmea Lateral	
Código	Rosca
TLF-01	1/8"
TLF-02	1/4"
TLF-03	3/8"
TLF-04	1/2"
TLF-06	3/4"
TLF-10	1"



Conexão "T" Fêmea Central	
Código	Rosca
TTF-01	1/8"
TTF-02	1/4"
TTF-03	3/8"
TTF-04	1/2"
TTF-06	3/4"
TTF-10	1"



Conexão "T" Macho Central	
Código	Rosca
TTM-01	1/8"
TTM-02	1/4"
TTM-03	3/8"
TTM-04	1/2"
TTM-06	3/4"
TTM-10	1"



Conexão Tampão Macho	
Código	Rosca
B-M5	M5
B-01	1/8"
B-02	1/4"
B-03	3/8"
B-04	1/2"
B-06	3/4"
B-10	1"



Conexão Tampão Fêmea	
Código	Rosca
BF-M5	M5
BF-01	1/8"
BF-02	1/4"
BF-03	3/8"
BF-04	1/2"
BF-06	3/4"
BF-10	1"



Conexão Tampão Sextavado	
Código	Rosca
BX-M5	M5
BX-01	1/8"
BX-02	1/4"
BX-03	3/8"
BX-04	1/2"
BX-06	3/4"
BX-10	1"



Espigão					
Código	Tubo	Rosca	Código	Tubo	Rosca
E01-02	1/8"	1/4"	E02-04	1/4"	1/2"
E02-02	1/4"	1/4"	E03-04	3/8"	1/2"
E01-03	1/8"	3/8"	E04-04	1/2"	1/2"
E02-03	1/4"	3/8"	E16-01	5/16"	1/8"
E03-03	3/8"	3/8"	E16-02	5/16"	1/4"

