

Display Digital Pressure Sensor S□D30 Series

For your safety, please read the following before using.


- Do not use corrosive or flammable gas or liquid with this product.
- Please use within the rating pressure range. Do not apply pressure beyond recommended maximum withstand pressure, permanent damage to the pressure sensor may occur.
- Do not drop, hit or allow excessive shock. Even if switch body appears undamaged, internal components may be broken and can cause malfunction.
- Turn power off before connecting wiring. Wrong wiring or short circuit will damage and / or cause malfunction.
- Do not use in environment containing steam or oil vapor.
- This product is not explosion-proof rated. Do not use in atmosphere containing flammable or explosive gases.
- Wiring for pressure sensor should avoid power source line and high voltage line. If use in the same circuit, noise may cause malfunction.

A. SPECIFICATIONS


TYPE	SCD30 (Compound)	SVD30 (Vacuum)	SPD30 (Positive)
Rated pressure range	-100.0 ~ 100.0kPa	0.0 ~ -101.3kPa	0.000 ~ 1.000MPa
Setting pressure range	-101.0 ~ 101.0kPa	10.0 ~ -101.3kPa	-0.100 ~ 1.000MPa
Withstand pressure	300kPa		1.5MPa
Fluid	Air, Non-corrosive gases, incombustible gases		
Set pressure resolution	kPa	0.1	—
	MPa	—	0.001
	kgf/cm ²	0.001	0.01
	bar	0.001	0.01
	psi	0.01	0.1
	inHg	0.1	—
mmHg	1	—	—
Power supply voltage	12 to 24VDC ±10%, Ripple (P-P) 10% or less		
Current consumption	≤40mA (With no load)		
Switch output	NPN open collector Max. load current: 125mA Max. supply voltage: 30VDC Residual voltage: ≤ 1.5V (load current 125mA)	PNP open collector Max. load current: 125mA Max. supply voltage: 24VDC Residual voltage: ≤ 1.5V (load current 125mA)	
	Repeatability (Switch output)	±0.2% F.S. ± 1 digit	
Hysteresis	One point set mode	Adjustable (*1)	
	Hysteresis mode	Adjustable (*1)	
	Window comparator mode	Adjustable (*1)	
Response time	≤2.5ms (chattering-proof function) 25ms, 100ms, 250ms, 500ms, 1000ms and 1500ms selections		
Output short circuit protection	Yes		
7 segment LCD display	Three color (Red/Green/Orange) display (Sampling rate: 5 times/1sec.)		
Indicator accuracy	±2% F.S. ±1 digit (ambient temperature: 25 ±3°C)		
Switch ON Indicator	Orange 1 & 2 Indicator		
Analog output (Voltage Output) *2	Output Voltage: 1 to 5V ≤ ±2.5%F.S. (within rated pressure range) Linearity: ≤ ±1% F.S. Output impedance: about 1kΩ		
Analog output (Current Output) *3	Output Current: 4 to 20mA ≤ ±2.5%F.S. (within rated pressure range) Linearity: ≤ ±1% F.S. Max. Load Impedance: 300Ω at power supply of 12V, 600Ω at power supply of 24V Min. Load impedance: 50Ω		
Environment	Enclosure	IP 40	
	Ambient temp. range	Operation: 0 ~ 50°C, Storage: -10 ~ 60°C (No condensation or freezing)	
	Ambient humidity range	Operation/Storage: 35 ~ 85% R.H. (No condensation)	
	Withstand voltage	1000VAC in 1-min (between case and lead wire)	
	Insulation resistance	50Mohm min. (at 500VDC, between case and lead wire)	
	Vibration	Total amplitude 1.5mm or 10G, 10Hz-150Hz-10Hz scan for 1 minute, two hours each direction of X, Y and Z	
Shock	100m/s ² (10G), 3 times each in direction of X, Y and Z		
Temperature characteristic	±2% F.S. of detected pressure (25°C) at temp. Range of 0~50°C		
Port size	1/8" BSPT		
Lead wire	Oil-resistance cable (0.15mm) ²		
Weight	Approx. *80g (with 2-meter lead wire), Approx. *45g (with male connector)		

*1. Hysteresis value is adjustable within 1 ~ 8 digits for one point set mode and Window comparator mode.
*2. If analog voltage outputs is selected, the analog current output cannot be selected at the same time.
*3. If analog current outputs is selected, the analog voltage output cannot be selected at the same time.

B. OUTPUT CIRCUIT WIRING GRAPH

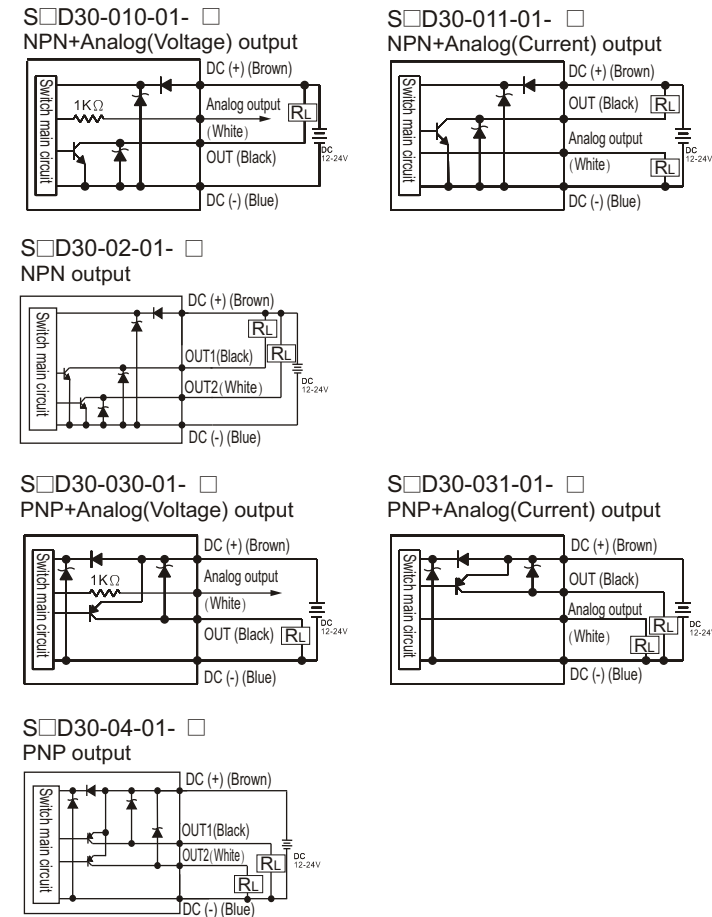


C. ORDERING INFORMATION

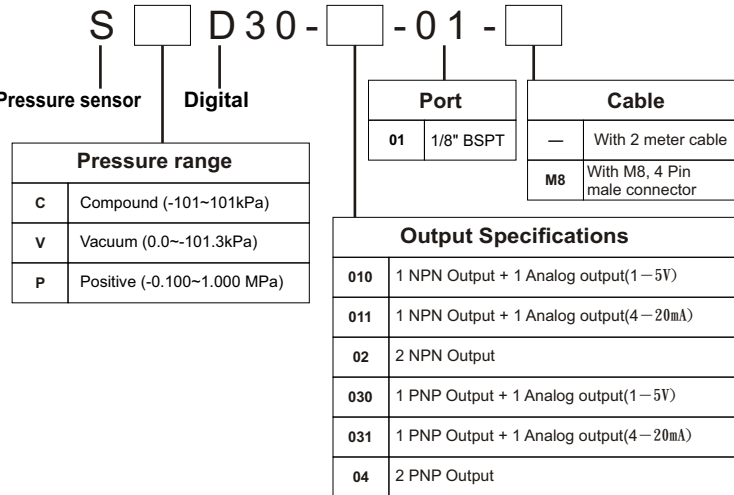


Option parts

- M84R-W0085-2M : M8, 4 Pin female connector
- P42-A : Mounting bracket (BT-3+BT-4)
- P40-B : Panel adapter (PA-3+PA-4)
- P40-C : Panel adapter + Front protective lid (PA-3+PA-4+FPC-2)


D. PANEL INSTRUCTIONS

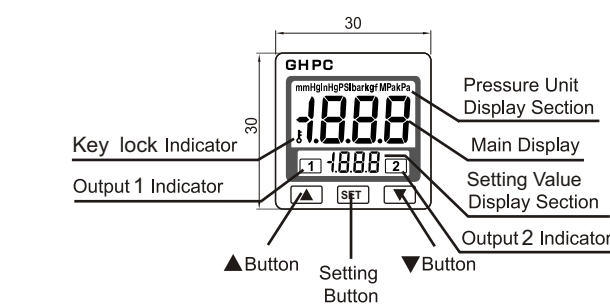


E. DIMENSION GRAPH

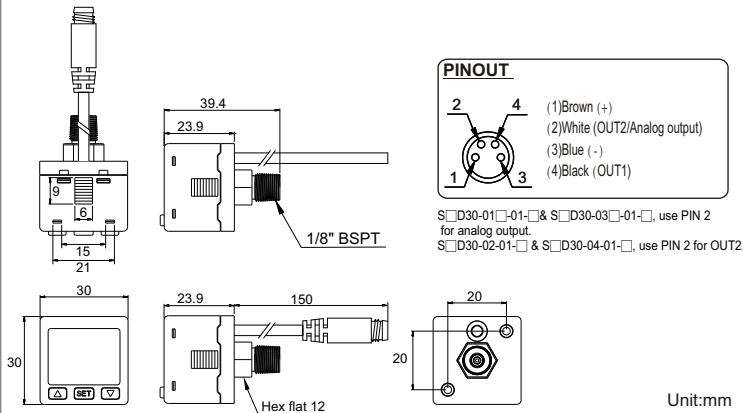

F. TYPE OF OPTION PARTS / DIMENSION GRAPH

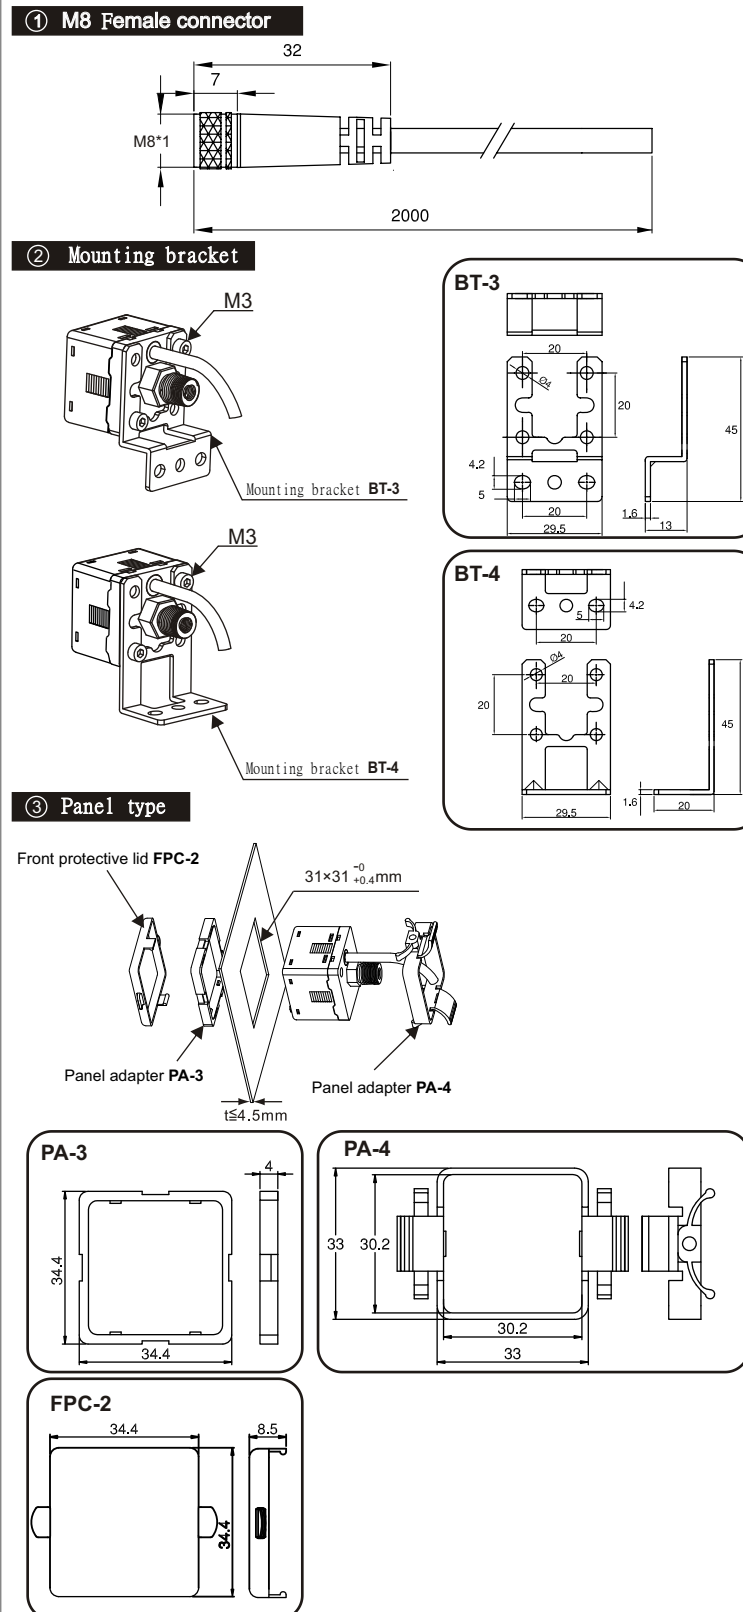


G. INITIAL SETTING MODE

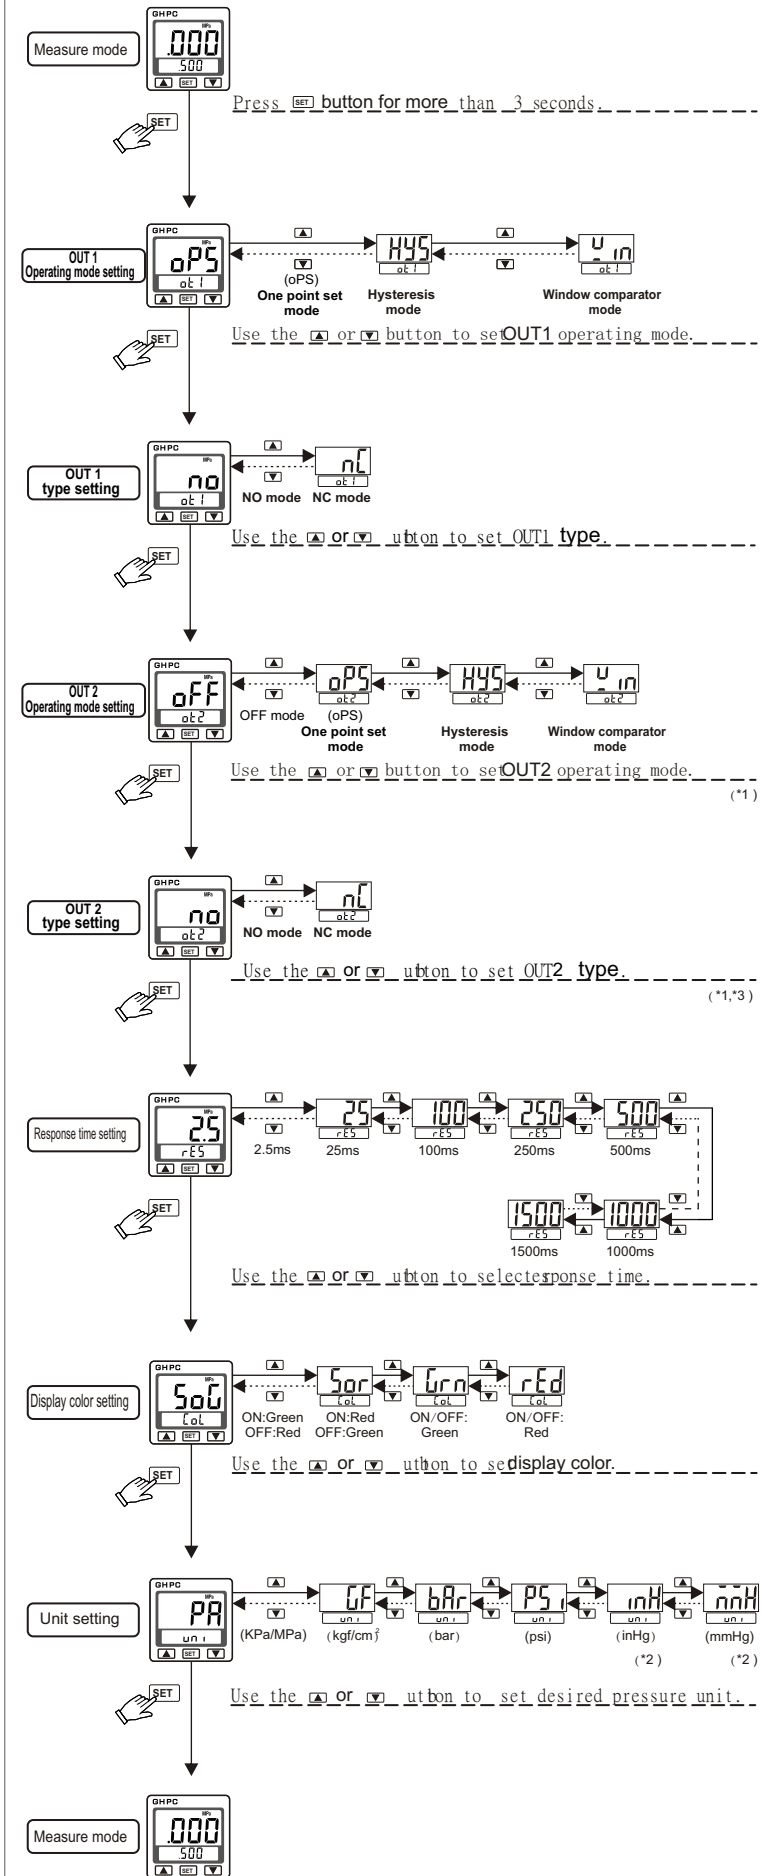

【NOTE :】

- *1. Only applicable for S□D30-02-01-□, S□D30-04-01-□.
- *2. This display unit is only applicable for SVD30 and SCD30.
- *3. This setting mode will not display when output 2 is set to OFF.

H. ADVANCE SETTING MODE

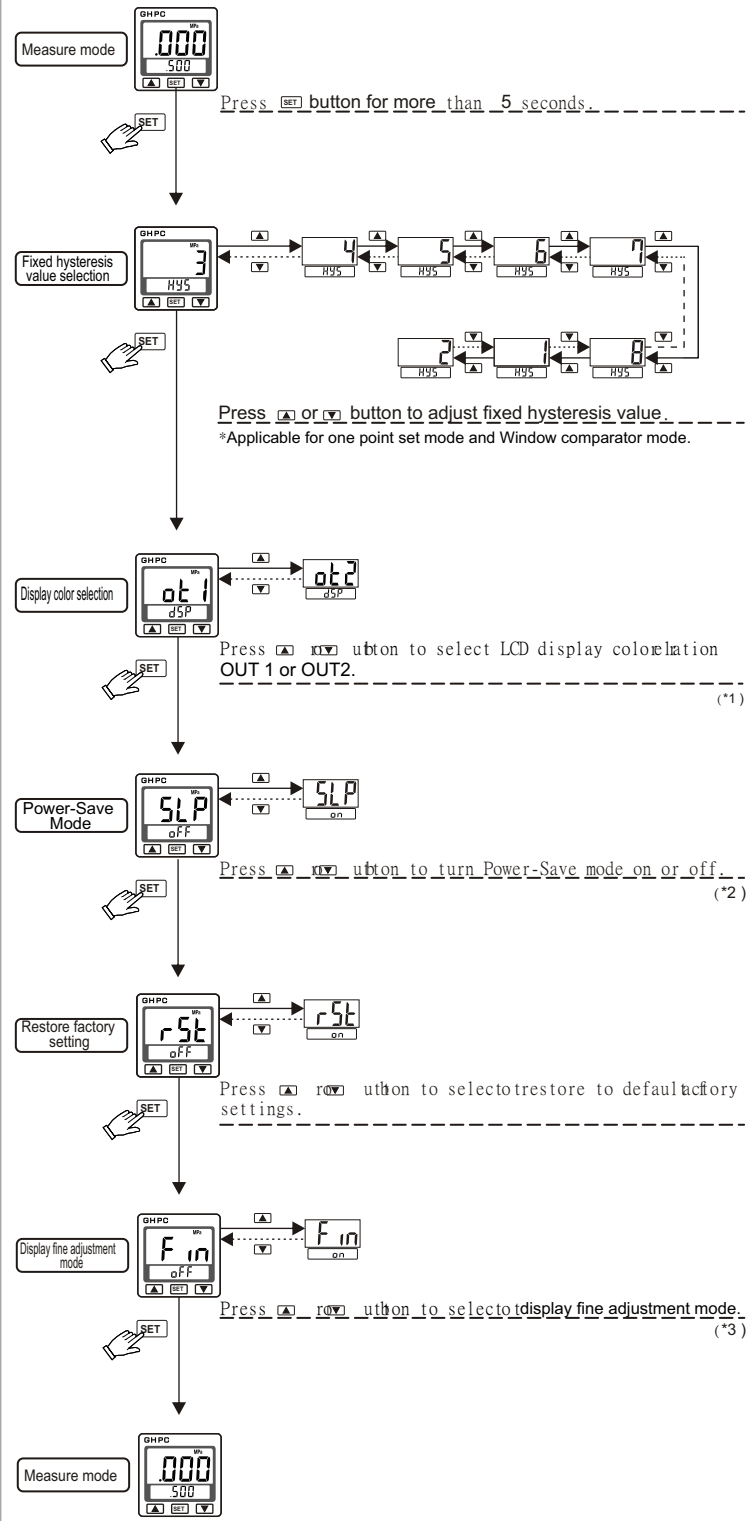


【NOTE :】

- *1. Only S□D30-02-01-□ and S□D30-04-01-□ have this setting selection.
- *2. When the sub-display shows "ON", Power-Save mode is activated. Please refer to Section 1 for detailed explanation.
- *3. When the sub-display shows "ON", Display fine adjustment mode is activated. Please refer to Section 1 for detailed explanation.

I. POWER-SAVE MODE


- During Power-Save mode, the main display will be turned off if no buttons are pressed after 30 seconds.
- During Power-Save mode, the output LCD's may not be synchronized with the output. It is normal and will not affect output operation.
- Press any button to turn on the main display temporarily.

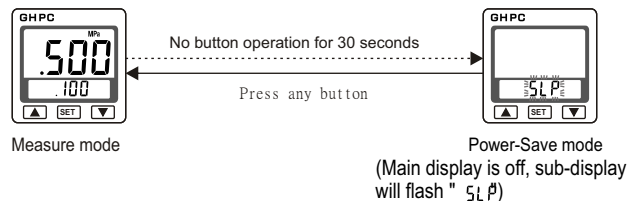

J. PRESSURE SETTING MODE


◎ Setting Condition 1 :

- OUT 1 mode setting : "oP5 (One point set mode)
- OUT 2 mode setting : "oFF (Not used)

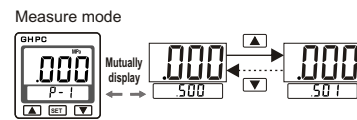


◎ Setting Condition 2 :

- OUT 1 mode setting : "oP5 (One point set mode)
- OUT 2 mode setting : "oP5 (One point set mode)

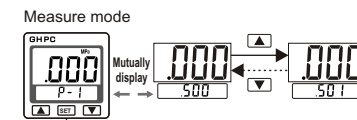


◎ Setting Condition 3 :

- OUT 1 mode setting : "oP5 (One point set mode)
- OUT 2 mode setting : "u in (Window comparator mode)

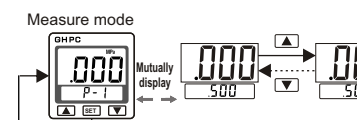


◎ Setting Condition 4 :

- OUT 1 mode setting : "H95 (Hysteresis mode)
- OUT 2 mode setting : "oFF (Not used)

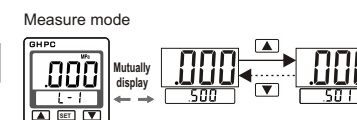


◎ Setting Condition 5 :

- OUT 1 mode setting : "H95 (Hysteresis mode)
- OUT 2 mode setting : "u in (Window comparator mode)

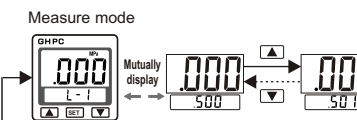


◎ Setting Condition 6 :

- OUT 1 mode setting : "H95 (Hysteresis mode)
- OUT 2 mode setting : "u in (Window comparator mode)

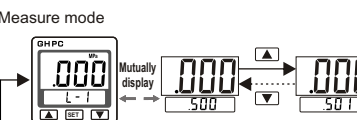

【NOTE :】

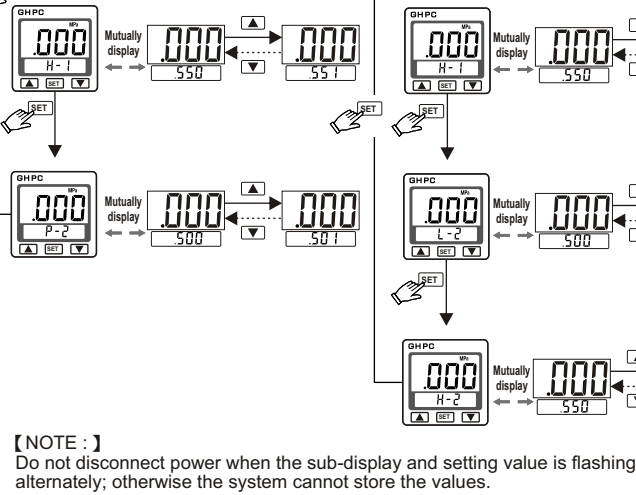


K. OUTPUT TYPE


(1) One point set mode:

Normal open mode

Positive/Compound (SPD30/SCD30)

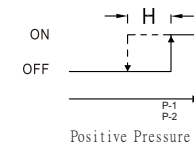


Vacuum (SVD30)

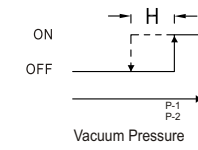


Normal close mode

Positive/Compound (SPD30/SCD30)

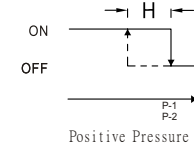


Vacuum (SVD30)

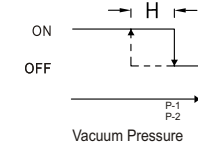


(2) Hysteresis mode:

Normal open mode

Positive/Compound (SPD30/SCD30)

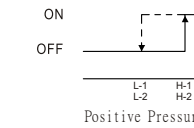


Vacuum (SVD30)

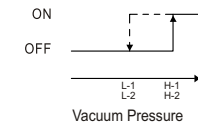


Normal close mode

Positive/Compound (SPD30/SCD30)

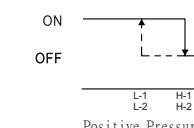


Vacuum (SVD30)

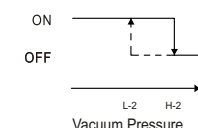


(3) Window comparator mode

Normal open mode

Positive/Compound (SPD30/SCD30)

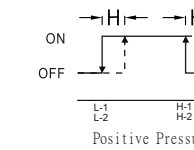


Vacuum (SVD30)

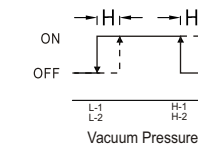


Normal close mode

Positive/Compound (SPD30/SCD30)

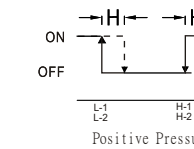

Vacuum (SVD30)


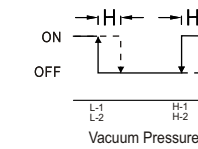


【NOTE :】


- *1 In case hysteresis is set at less than or equal to 2 digits, switch output may chatter if input pressure fluctuates near the set point.
- *2 When using window comparator mode, the difference between two set points must be greater than the fixed hysteresis, otherwise will cause the switch output to malfunction.

L. ZERO POINT SETTING

Press the **▲**+**▼** button at the same time until the "00" is shown. Release the button to end zero setting.

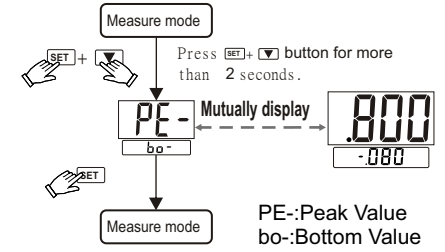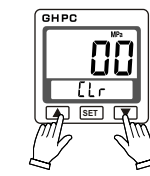


N. KEY LOCK/UNLOCK MODE

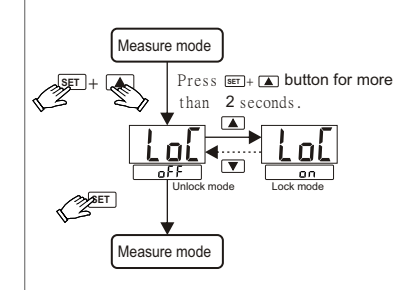


- Use key lock mode to prevent unauthorized or accidental tampering with the switch setting.
- When lock mode is selected, panel will display "LoL".



O. FINE ADJUSTMENT MODE

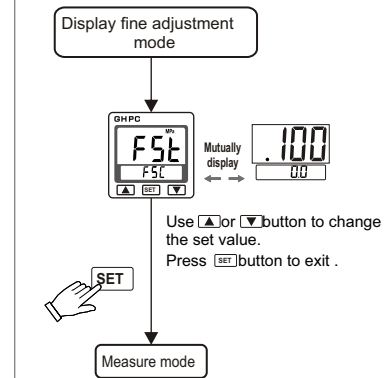

This function eliminates slight differences in the output values and allows uniformity in the numbers displayed. Displayed values of the pressure sensor can be calibrated to within $\pm 2.5\%$ R.D..

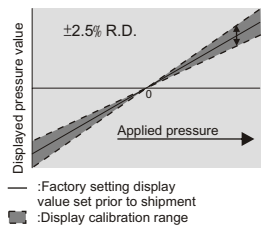

R.D. (Real Detect)

【NOTE :】
setting resolution is $\pm 0.1\%$ R.D.

P. ERROR CODE INSTRUCTION

Error Type	Error code	Error Condition	Troubleshooting
Excess load current error	out1 Er1	Output 1 load current is more than 125 mA	Turn power off and check the cause of overload current or lower the current load under 125 mA, then restart.
	out2 Er2	Output 2 load current is more than 125 mA	
Residual pressure error	Er3	During zero reset, ambient pressure is over $\pm 3\%$ F.S.	Change input pressure to ambient pressure and perform zero reset again.
Applied pressure error	HHH	Supply pressure exceeds the upper limit of pressure setting.	Adjust the pressure within operating pressure range.
	LLL	Supply pressure exceeds the lower limit of pressure setting.	
System error	Er4	Internal system error	Turn power off, and then restart. If error condition remains, please return to factory for inspection.
	Er5	Internal system error	
	Er6	Internal data error	
	Er7	Internal data error	
	Er1	Internal data error	

Q. PRESSURE UNIT CONVERSION TABLE

From	To	Pa	kPa	MPa	kgf/cm ²	mmHg	psi	bar	inHg
1 Pa	1	0.001	0.000001	0.000010197	0.00750062	0.000145038	0.00001	0.0002593	
1 kPa	1000.000	1	0.001000	0.010197	7.500616	0.145038	0.010000	0.2953	
1 MPa	1000000	1000	1	10.197	7500.616	145.038	10	295.2998	
1 kgf/cm ²	98066.5	98.0665	0.0980665	1	735.559	14.2233	0.980665	28.9579	
1 mmHg	133.32	0.13332	0.000133	0.0013595	1	0.019336	0.0013332	0.039370	
1 psi	6895	6.895	0.006895	0.07031	51.7157	1	0.06895	2.036074	
1 bar	100000.0	100.0000	0.100000	1.01972	750.062	14.5038	1	29.52998	
1 inHg	3386.388	3.386388	0.003386	0.034530	25.40000	0.491141	0.033863	1	